

Instructions for Room 212D

AFTER USE

 
*** TURN OFF the Projector**

*** TURN OFF the Audio Amplifier**

*** LOCK the cabinet, WITH THE REMOTES BACK INSIDE, when done**

*** If you are having any problems, call the Help Desk at x4429**

Projector Instructions:

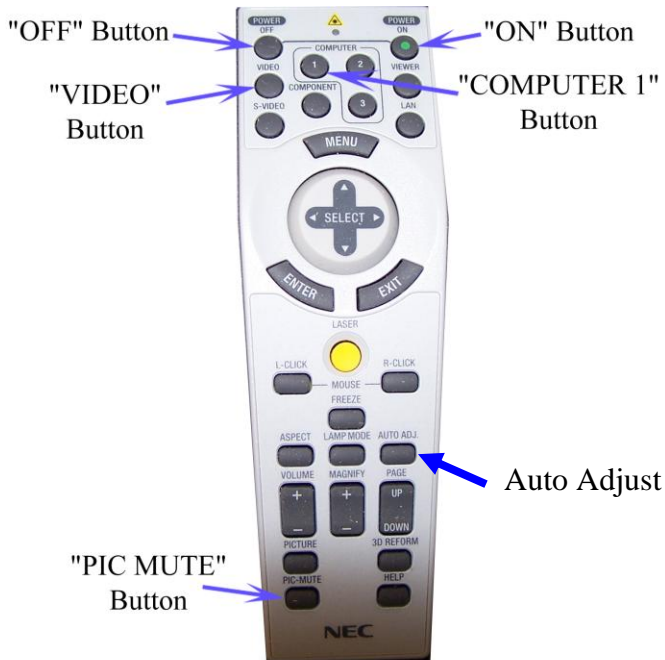


To turn on the projector, point the remote at the projector (may need to adjust your position), press and hold the **ON** button for about 3 seconds, and in 30 seconds or so you should have a picture.

If you wish to change the source (i.e. the computer is showing and you would like to watch a video) press the **VIDEO** button for the DVD/VCR or press the **Computer 1** button to get back to the computer.

If the projected image does not look right, try pressing the **Auto Adjust button on the remote.*

To turn off the projector, point the remote at the projector, press the **OFF** button. A message will appear on the screen saying "Power Off. Are you sure?" Hit the **OFF** button again to select "YES" and the projector will shut itself down.

 Video (DVD/VHS) Instructions:

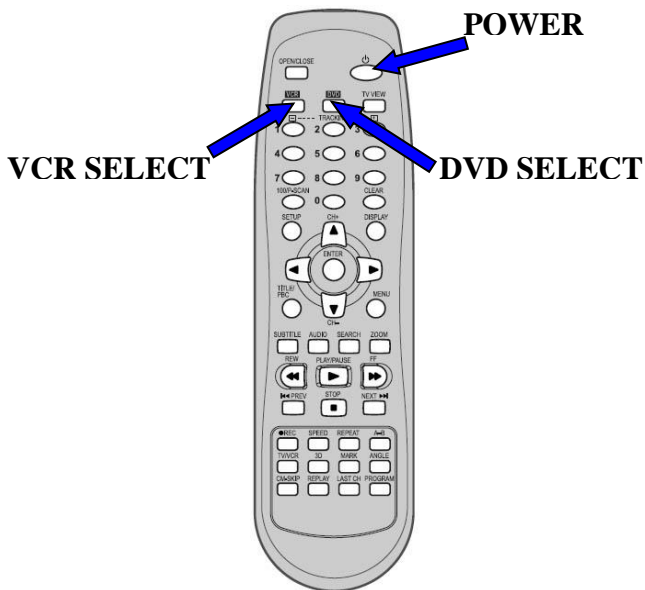

Here is what the DVD/VCR player looks like:



First turn on the DVD/VCR player – either by using the **POWER** button on the remote, or by pressing power on the actual player.

Next you will need to change the projector source to Video by hitting the **VIDEO** button on the projector remote.

(By pointing the remote at the DVD/VCR player)

To control a DVD you need to hit the **DVD** button on the remote; to control a VHS you need to hit the **VCR** button. The control panel on the actual player will tell you which mode you are in (DVD or VCR). There is also a button on the actual player labelled **SELECT** which will toggle between DVD or VCR mode.

Audio Instructions:

Here is what the audio amplifier looks like:

 


If you are watching a Video, playing a CD or have any type of audio playing from the computer, you will need to turn the amplifier on simply by pressing the **ON/OFF** button on the amplifier itself.

PLEASE REMEMBER TO TURN IT OFF WHEN FINISHED!!

NOTE: The audio from the DVD/VCR player and from the computer are “mixed together.” What this means is that when showing a video, do not play any sort of audio on the computer as it will be heard also.

Presentation Remote:

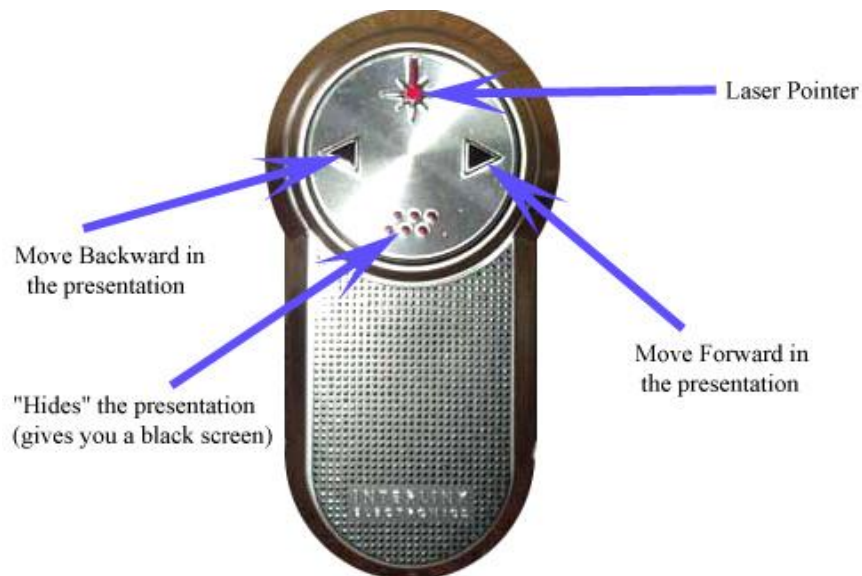

This remote is very simple to use. Once you open up Power Point file and start your presentation, you can grab this remote, walk around, and still be in control of your presentation (making sure you are pointing the remote to the projector). There are four buttons to be aware of (as they are labelled in the above picture). The top one is a laser pointer, the two arrows move your presentation forwards or backwards, and the bottom button will “hide” your presentation by putting up a black screen.